 
 
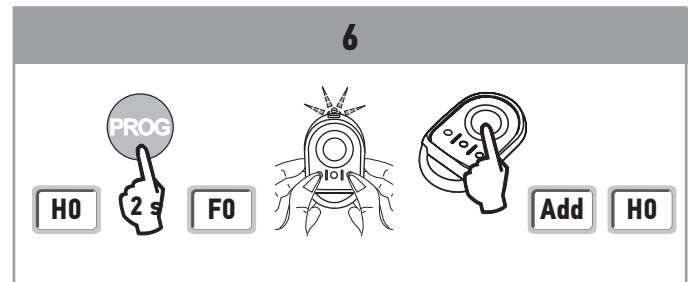 
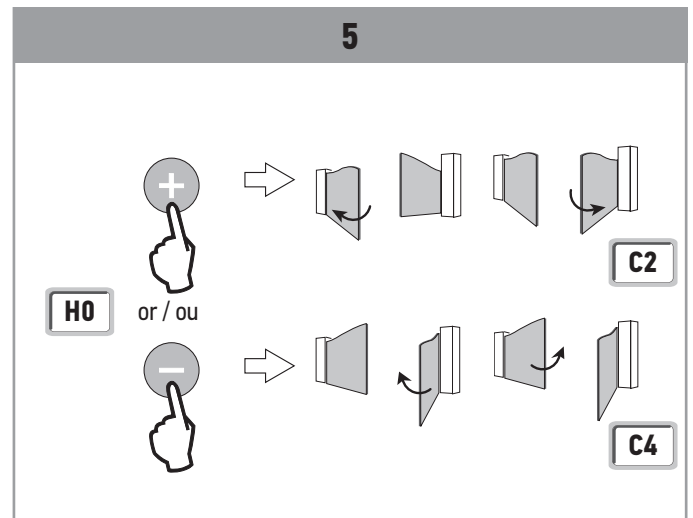 
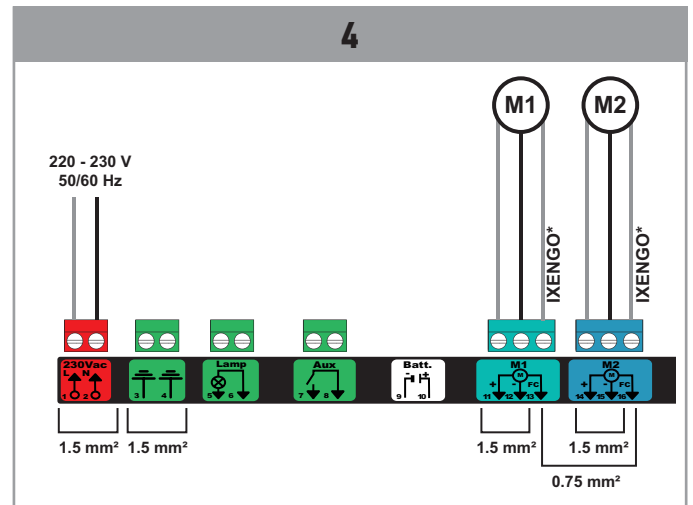 
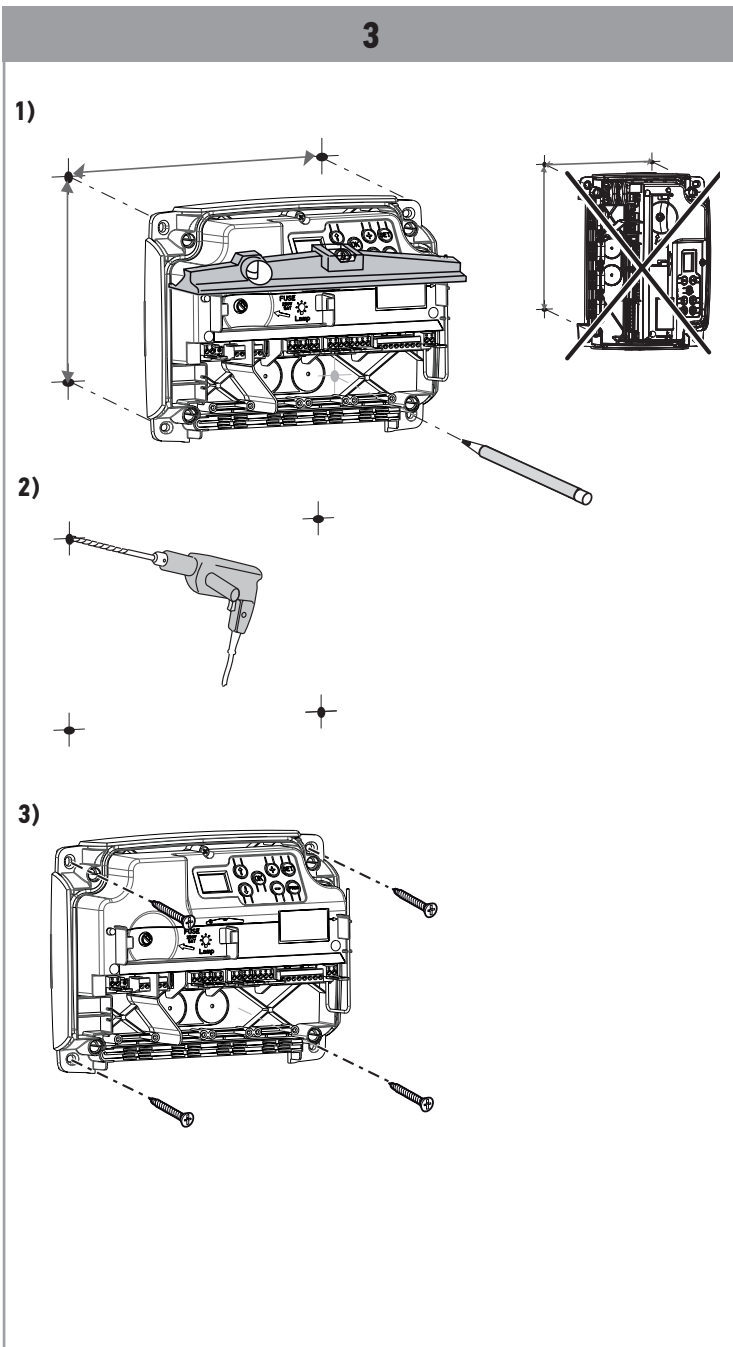 
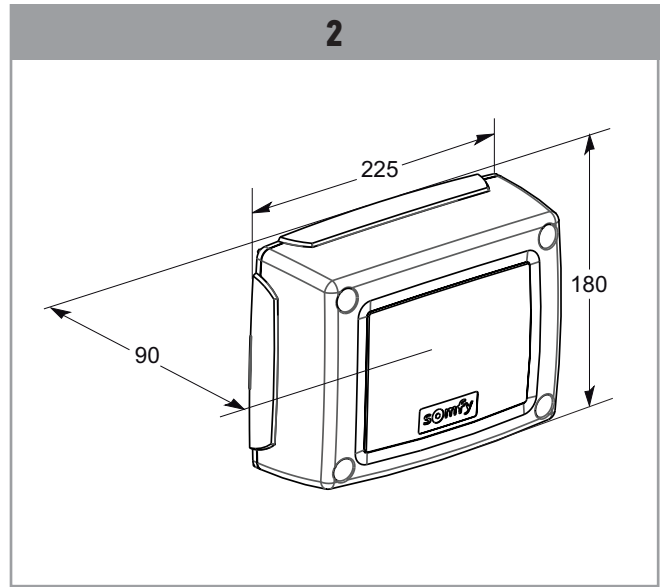 
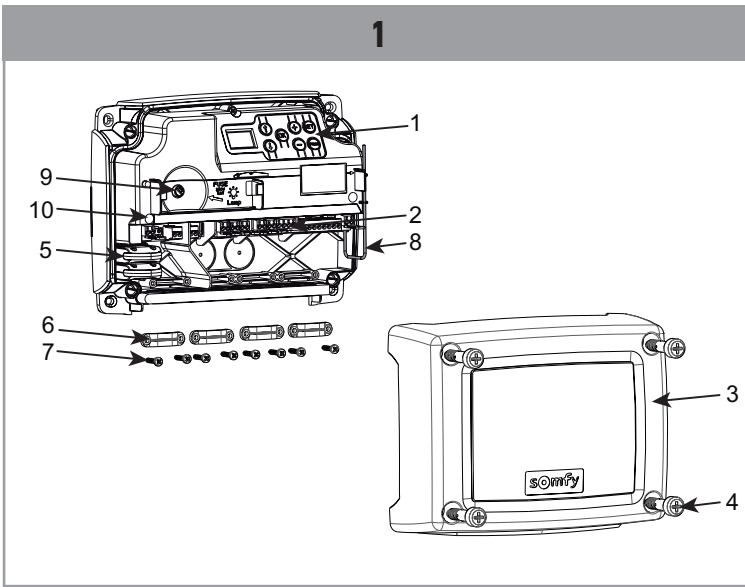 


CONTROL BOX 3S io


- | | |
|---|---|
| FR Manuel d'installation - Illustrations | ES Manual de instalación - ilustraciones |
| EN Installation instructions - Illustrations | EL Εγχειρίδιο εγκατάστασης - Εικόνες |
| DE Installationsanleitung - Abbildungen | TR Montaj kılavuzu - örneklemeler |
| NL Installatiegids - Illustraties | AR دليل التركيب |
| PL Instrukcja montażu - Ilustracje | |
| HU Telepítési kézikönyv - Ábrák | |
| CS Návod k montáži - obrázky | |
| RO Manual de instalare - Ilustrații | |
| IT Manuale d'installazione - Illustrazioni | |

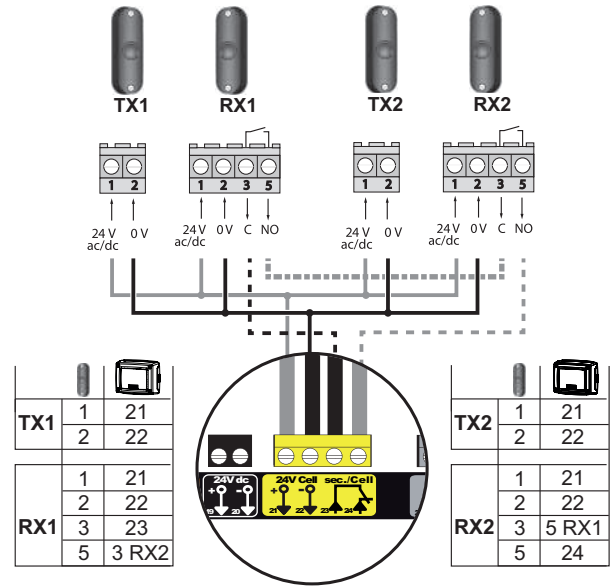



A $\overline{PO7} = 1$








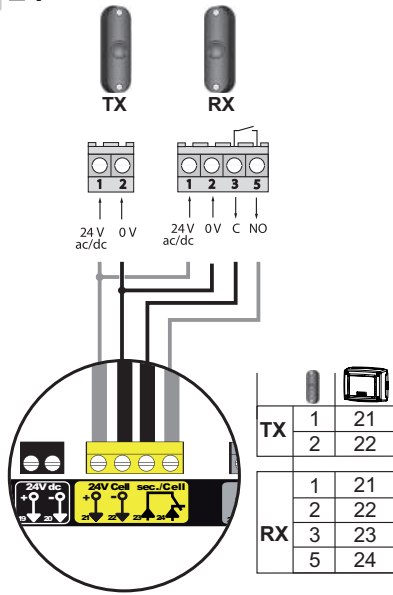


 B $\overline{PO7} = 3$

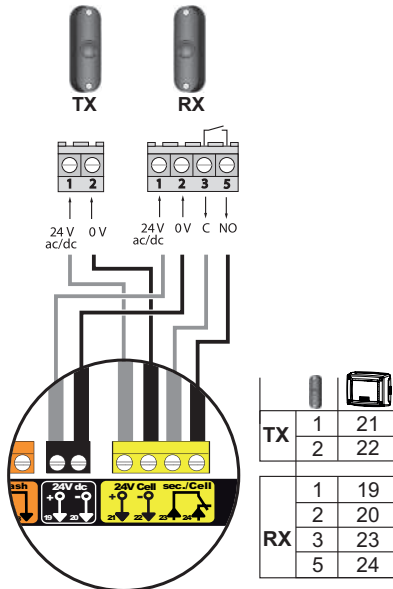


C $\overline{PO7} = 4$

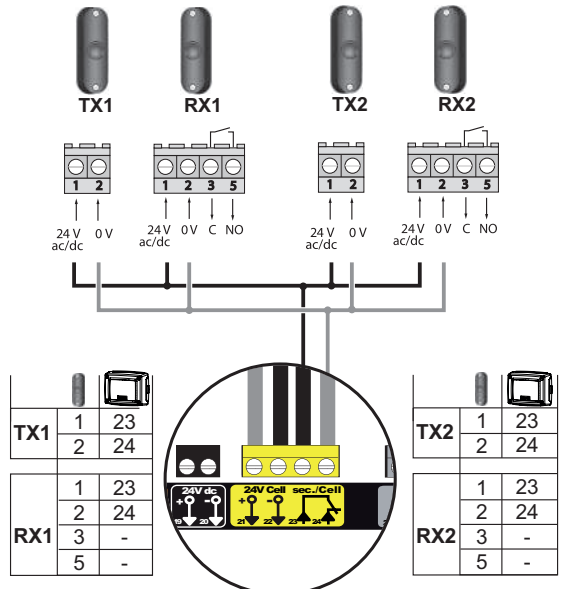 
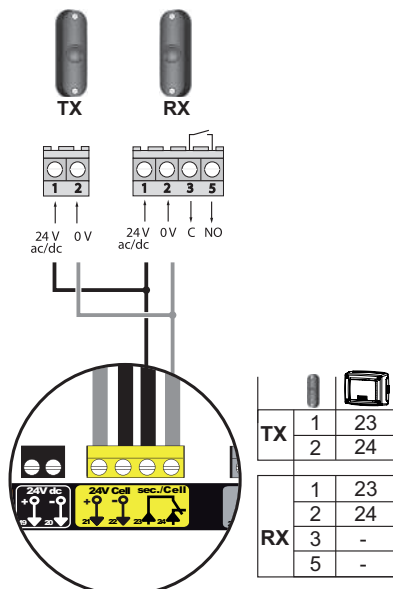 


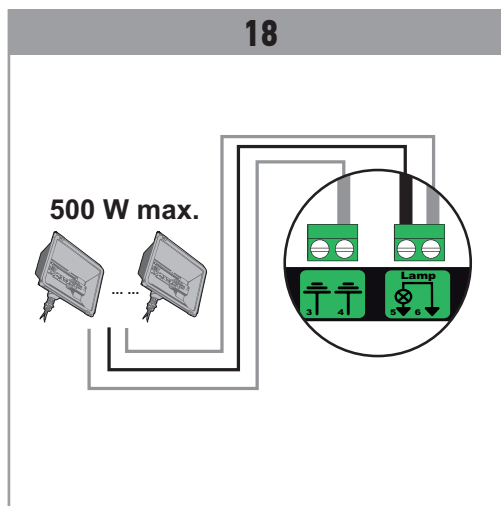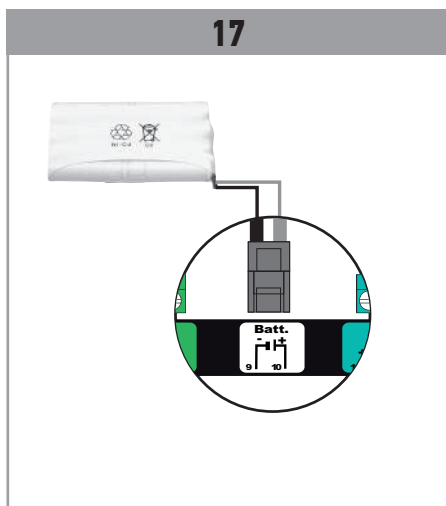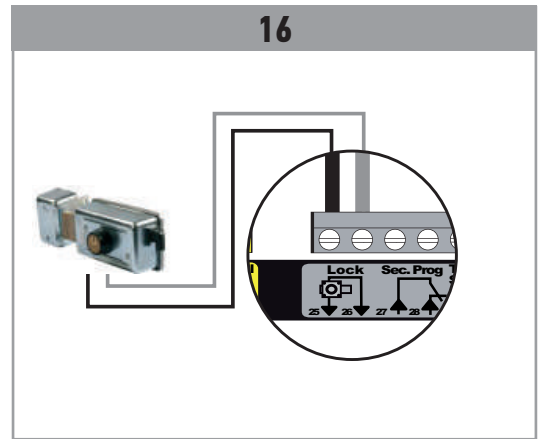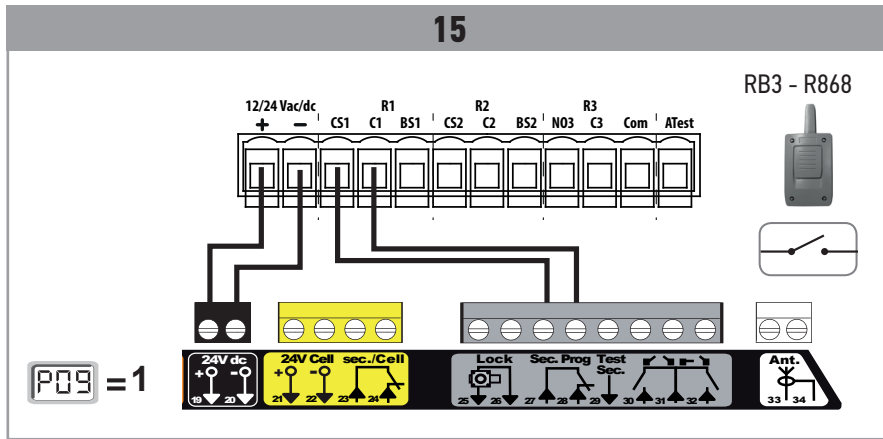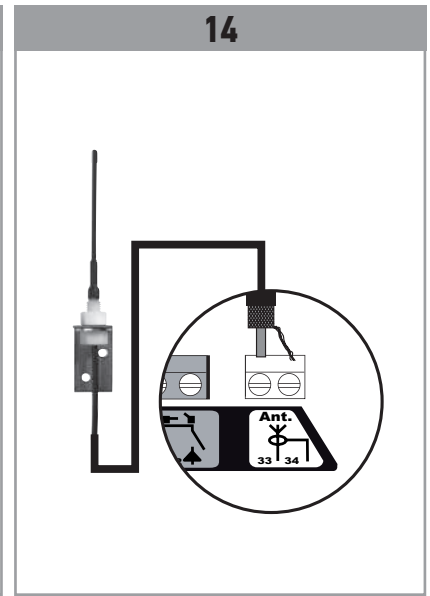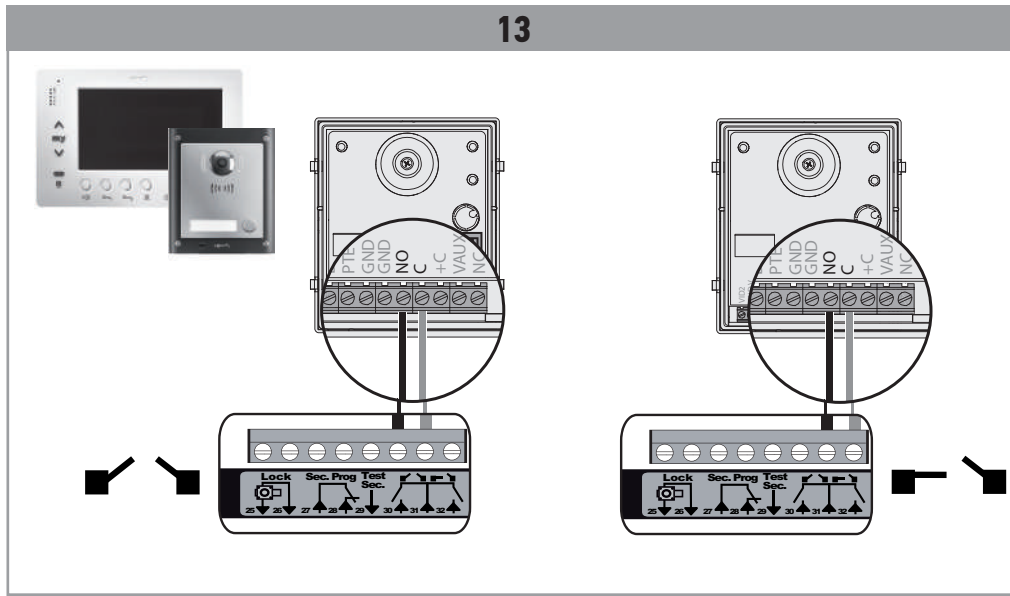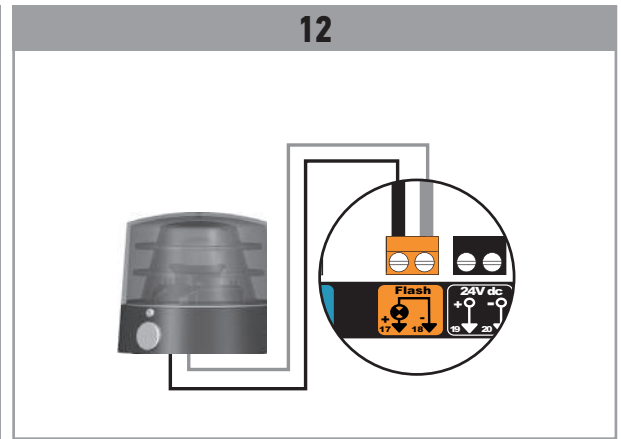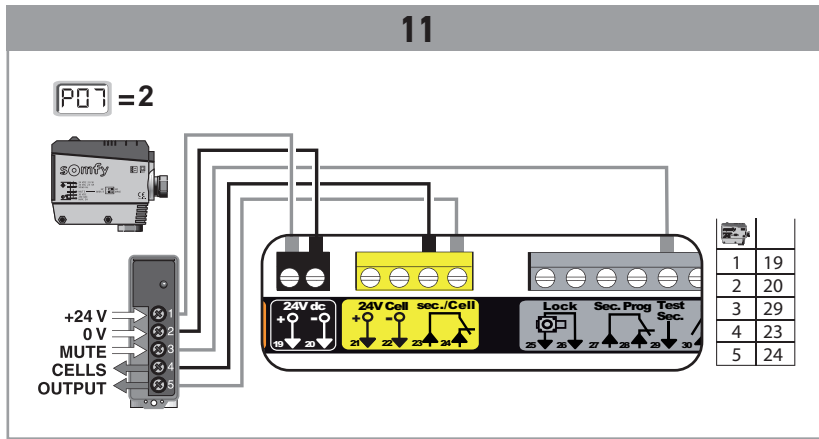        


19

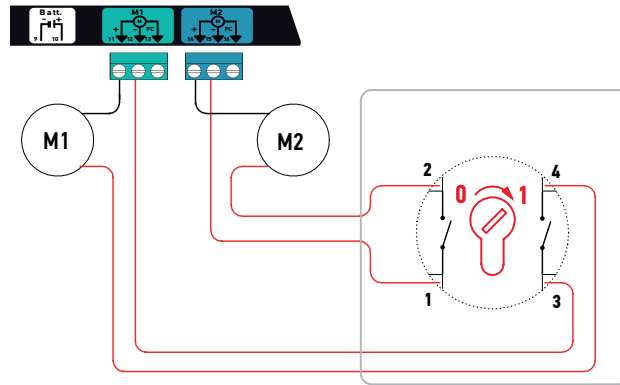 

Ref. 1841021

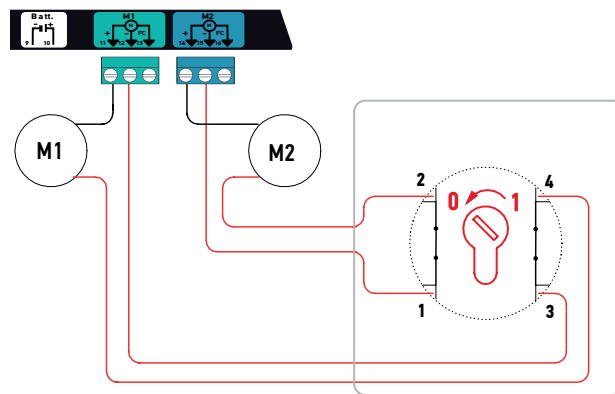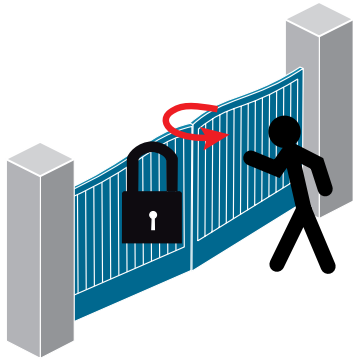  

20

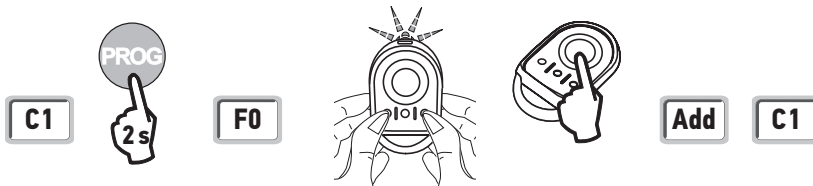 


21




22



 
23

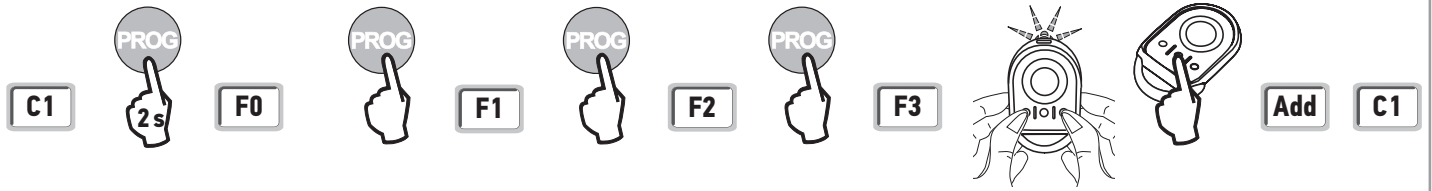


24

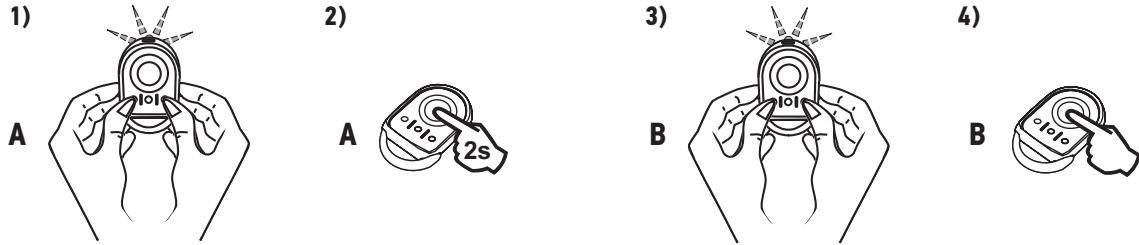 


25

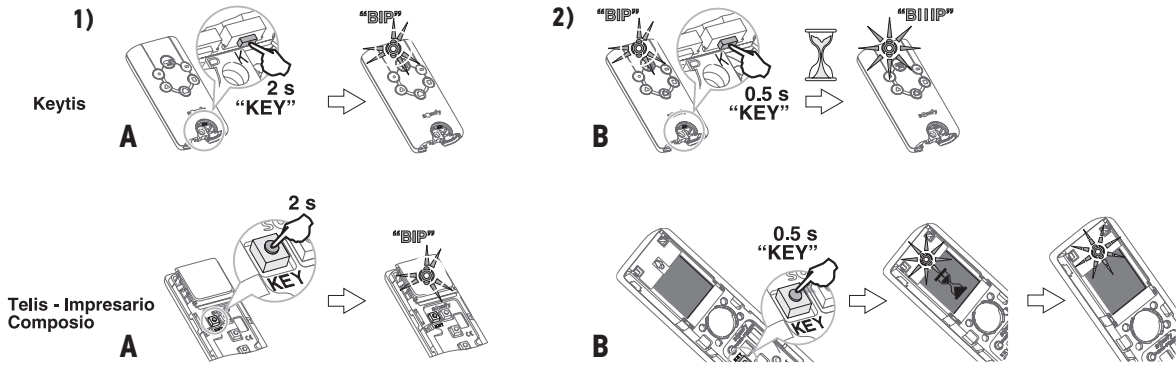 


26

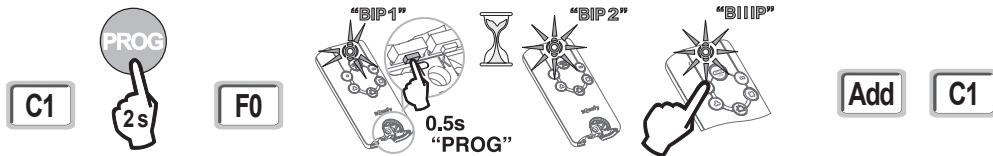 


27

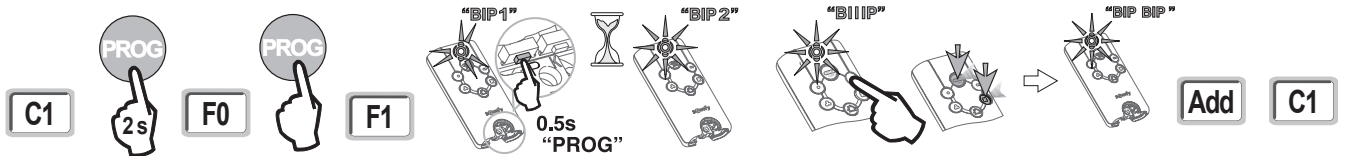 


28

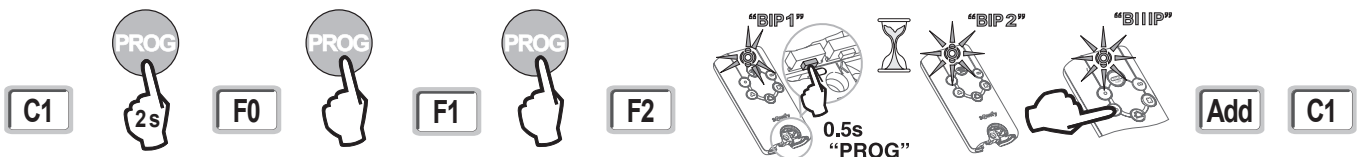 


29

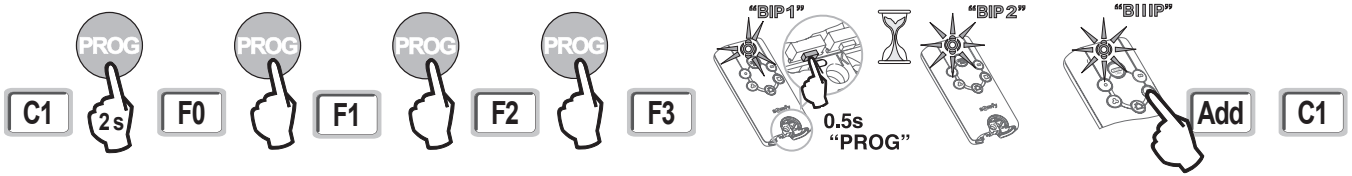 


30

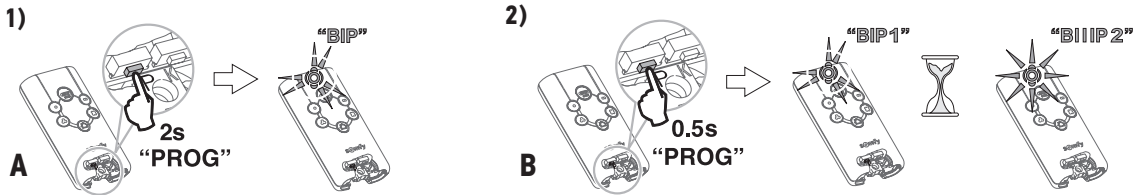 


31

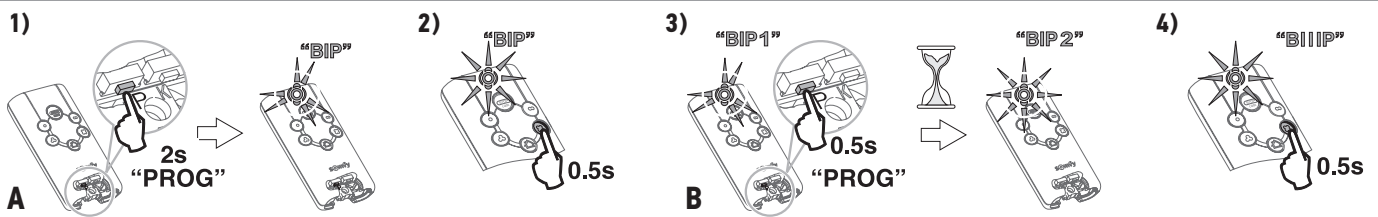 


32

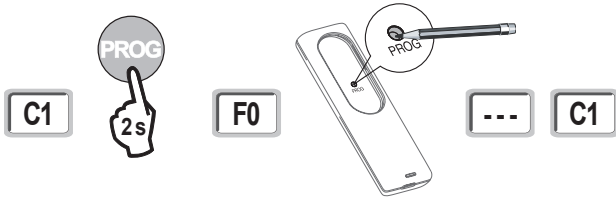 


33

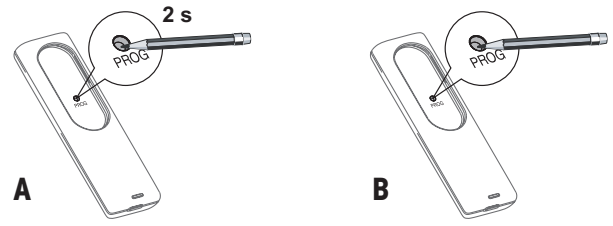 


34

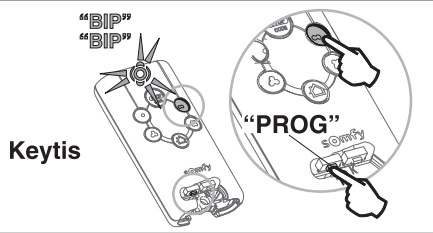 


35

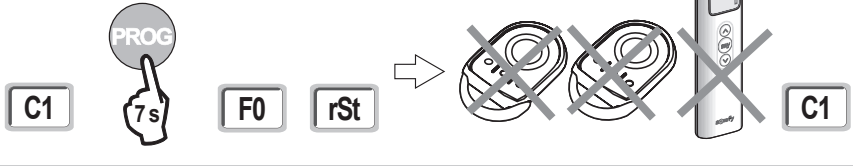 


36

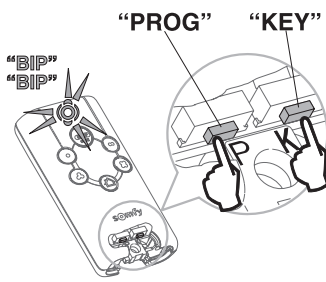 

37

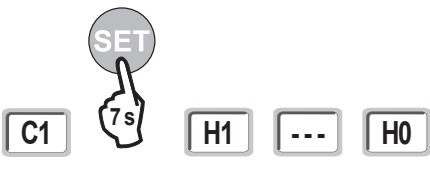 

38

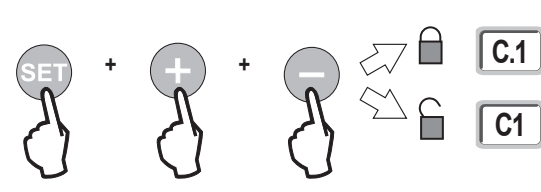 

SOMFY ACTIVITES SA
 50 avenue du Nouveau Monde
 74300 CLUSES
 FRANCE

www.somfy.com

